

# Quick Start

1

## Connect the Power (Power Supply included)

Watch for Heartbeat LED  
Listen for the 'BEEP'  
The **R-LinX** is ready to configure

2



## Connect via PC Terminal

Connect to the **R-LinX**  
via the crossed net-work  
cable (included).

Set a Static IP of  
**192.168.1.50**  
(See network guide on  
USB drive for assistance)

Open your web browser  
and type the following  
address:

**192.168.1.100:1880/ui**

Connect to the **R-LinX**  
ad-hoc Wi-Fi network

password: **globalview**

Open your web browser  
and type the following  
address:

**172.24.1.1:1880/ui**

2



## Connect via Smart Device

Connect to the **R-LinX** ad-hoc Wi-Fi  
network

password: **globalview**

Scan the QR code on the **R-LinX** to  
access the User Interface via your web



3



## Connect to your world

Create a 3 stage escalation path,  
delivering messages to DMR Radio,  
SMS, email and more.

↓

Further tools and guides are  
available on the USB

[support@globalviewsystems.co.uk](mailto:support@globalviewsystems.co.uk)